 
 


Ande. This can be sent through Byron and Melanie Sedler in Legal. The one outstanding detail is Table of Contents design on page 2. (I'll get Janet help tomorrow.) Ted.

Revision date: 5.11.00	project: psc[communicate manual
Size: 3"x4"	designers: Janet Boye and Jered Bogli
text version: 14+ proof#: 2	Color: 2/2 back + pms 5507



○ introduction

Congratulations. The psc[communicate is an advanced Portable Sport Communication device. Use it to broadcast and receive voice transmissions over a range of up to 2 miles. The psc[communicate was specially designed by Nike for sport utility and reliability. It is small and lightweight, easy to use, and includes special features that improve battery life and ensure dependability.

This manual provides simple instructions for 2 different products, the Nike psc[communicate and the Nike psc[communicate wx.


The  symbol points to especially important information and helpful tips.

table of contents


3 battery installation
 3 liquid crystal display
 4 power button
 4 select power settings
 6 talk button
 6 adjust volume
 8 call button
 8 light/lock button
 10 mode button
 12 select main channel
 12 select sub channel
 14 scan channels
 16 scan sub channels
 18 button confirmation tone
 20 vox
 22 weather mode
 24 attaching the lanyard
 24 microphone / speaker jack
 26 warranty

 
FCC Warning: Replacement or substitution of transistors, regular diodes or other parts of a unique nature, with parts other than those recommended by Nike, may cause a violation of the technical regulations of part 95 of the FCC rules, or violation of Type Acceptance requirements of Part 2 of the Rules.

battery installation, lcd

battery installation





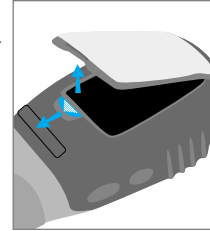







Replace with three AAA batteries as shown.

 Note: When Battery power is low the  indicator will blink.



battery compartment access

liquid crystal display

-  Weather Mode Indicator
-  Button Lock Indicator
-  Boost/Power save Indicator
-  Transmitting indicator
-  Receiving Indicator
-  Sub Channel Indicator
-  Channel indicator
-  Battery power remaining indicator
-  Voice activated call Indicator (psc communicate wx only)
-  On/off indicator
-  Volume indicator
-  Button confirmation tone/roger beep indicator



liquid crystal display

basic operation

power button

power button

There are 3 different power settings:

1. Power Off
2. Power Save Mode.
⚡ Power is on. Transmit at 60% of maximum power. Use Power Save Mode to save battery life when talking over shorter distances. This is the default setting. When you first turn on the unit, Power Save is selected.
3. Power Boost Mode.
⚡ Power is on. Transmit at 100% power. Use Power Boost Mode to achieve maximum talk range.

select power settings

1. Press POWER once to turn unit on. Power Save mode is selected.
2. Press POWER again to alternate between Power Save and Power Boost mode.
3. Press and hold POWER to turn off the unit.

Note: Power Save and Power Boost modes don't effect the receiver. The psc[communicate always receives at maximum power.



4


5

○ basic operation

○ talk button, volume

talk button

Just push and speak clearly into the microphone. Users on the same channel who are within range will be able to hear you.

 You cannot hear incoming voice transmissions when the talk button is being pressed!

About the effective range

The range of the psc[communicate on Power Boost is about 2 miles. However, this range may be extended or lessened by many factors. Among these are battery power remaining, obstacles to clear transmission like buildings, mountains or hills, cloud cover, trees, altitude, etc.

adjust volume

Adjust the volume of incoming transmissions and button confirmation tones by pressing the + and - keys.



6

7

basic operation

Several buttons have more than one function. The primary function of each button is labeled with an icon on the button itself. If there is a secondary function it will be indicated by an icon on the edge of the LCD display. Press and release to activate the primary function. Press and hold to activate the secondary function.

call button

- Press once to alert other users that you want to talk. Anyone on the same channel who is within range will hear a tone.
- Your psc[communicate normally filters out weak signals and static. Press and hold the CALL to deactivate this filter. By doing so, you "open the speaker," increasing your ability to receive weak signals normally eliminated by the filter.

lock button

- Press once to briefly illuminate the display.
- To avoid accidental button operation, press and hold. Locks all the buttons except TALK, CALL and +/-.

call, light/lock button



8

9

basic operation

mode button

mode button

Press MODE to select the setting you want to change. The normal display is replaced by the adjustable setting. Use the + and - buttons to adjust the settings. These are the settings you can change.

1. Main Channel (1-14)
2. Sub Channel (1-38)
3. Channel Scan (ON/OFF)
4. Sub Channel Scan (ON/OFF)
5. Button Confirmation Tone and Roger Beep ON/OFF
6. Vox (OFF, ON LO, ON HI) (psc[communicate wx only)

When you have proceeded through all adjustable settings, the normal display will reappear. Or, press TALK at any time to return to the normal display.



10

11

○ basic operation

select main channel

There are 14 main channels.

To select main channels:

1. Press MODE until CHAN is displayed.
2. Press + and - keys to select the main channel.

select sub channel

Each main channel has 38 sub channels, sometimes called CTCSS channels. Select one of these sub channels to transmit on a channel that is free from traffic.

To select sub channels:

1. Press MODE until SUB CHAN is displayed
2. Press + and - keys to select the sub channel.

Note :If you select channel "0," you will be able to receive transmissions from all the sub channels of the main channel you selected.

○ select main channel



12

13

basic operation

channel scan

scan channels

The channel scan feature allows you to scan all channels for broadcast traffic. You can also scan the sub channels of a channel in order to identify the specific sub channel of the broadcast traffic.

To scan main channel:

1. Press MODE until SCAN is displayed.
2. Press + or - keys to begin scanning the main channels.

The unit will scan all main channels and stop on a channel where broadcast traffic is detected. Once traffic is found, you have 10 seconds to do one of the following:

- ✎ Press TALK to begin broadcasting on that channel.
- ✎ Press + or - keys to continue scanning other main channels.
- ✎ Proceed to sub channel scan to identify the specific sub channel of the broadcast.



basic operation

sub channel scan

scan sub channels

The sub channel scan feature allows you to identify the exact sub channel of a broadcast on one main channel.

To scan sub channels:

1. Select a main channel to scan, either by scanning main channels for broadcast activity (see above) or manually selecting a channel.
2. Press MODE until SCAN SUB is displayed.
3. Press + or - keys to begin scanning the sub channels.

*The unit will scan the sub channels of the selected channel. It will stop where broadcast traffic is detected. Once traffic is found, you have 10 seconds to do one of the following:

- ✔ Press TALK to begin broadcasting on that channel.
- ✔ Press + and - keys to continue scanning other sub channels.



16

17

basic operation

confirmation tone

 
button confirmation tone and "roger beep" on/off

When this feature is activated, two things will happen:

- ✦ a tone will sound at the press of any button, confirming that you have pressed it.
- ✦ a tone will sound whenever you release the TALK button that is audible to anyone else on your same channel and sub channel. It's an easy way to signal that you are done transmitting, and helps to avoid "talking over" someone else.

To activate the confirmation tone and "roger beep":

1. Press MODE until the [insert bell icon] is displayed
2. Press + and - keys to alternate between on and off.

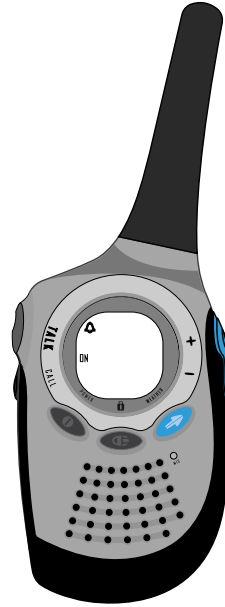

18

19

basic operation

 
vox

vox (psc[communicate wx only)

The VOX feature enables voice activated transmission and allows you to set the microphone sensitivity. You can use this feature with or without an accessory like an ear bud/microphone. Go to www.nike.com for more information about accessories.

To activate the VOX feature and select microphone sensitivity:

1. Press MODE until VOX is displayed.
2. Press + and - keys to alternate between VOX OFF, VOX HI and VOX LO.

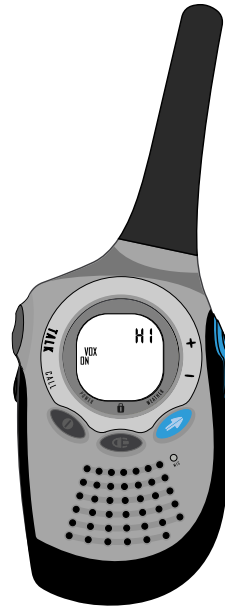

basic operation


weather mode

weather mode (psc[communicate wx only)

The National Oceanic and Atmospheric Association operates a network of over 500 local broadcast stations which provide continual local weather updates across most of the United States, including Alaska and Hawaii.

The psc[communicate wx can receive weather broadcasts from NOAA weather stations that are within the nearest station's range. To receive NOAA weather broadcasts, you must set your unit to Weather mode and find the channel for your local area.

Select weather mode:

1. Press and hold the MODE button.
 - The  icon indicates that the units is in weather mode.
2. Press MODE until CHAN is displayed.
3. Press + and - keys to select the weather channel for your local area.

Exit weather mode:

 
1. Press and hold MODE, or press TALK to exit Weather mode and return to normal transmit/receive mode.



○ basic operation

attaching the lanyard


Attach the included lanyard by looping it through the base of the unit as shown.

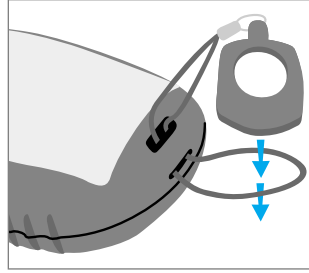

○ lanyard and mic

external microphone/speaker jack

 The psc[communicate features a 2.5mm combination input/output jack. This single jack will accept a hands-free accessory with both a microphone and a speaker. Go to www.nike.com to learn more about available accessories.

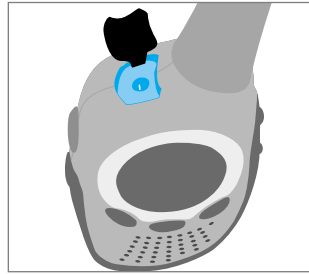

○ one year limited warranty

our warranty to you:

Nike, inc. ("Nike") warrants that your product will be free from defects in materials and workmanship for a period of one year from the date of original retail purchase. If you discover a defect covered by this warranty, we will repair or replace the product at our option using new or remanufactured components. Nike's liability is limited solely to the repair or replacement of the defective product. This warranty is extended to the original end user purchaser only and is not assignable or transferable to any other party. Any parts or boards removed in the replacement or remanufacture process shall become the property of Nike.

how to obtain service under this warranty:

To obtain service under this warranty, please contact the dealer from whom you purchased this product or send the product to Nike's service center.

You must deliver the product and the original sale receipt to the dealer from who you purchased this product or to the Nike service center in order to obtain service under this warranty. If you return the product to Nike's service center, you must pay for shipping to Nike's service center. Nike recommends that you use a shipping service providing tracking and insurance capability. Nike is not responsible for products lost in the mail. Our service center mailing address is:

Parsec Enterprises
7501 North Harker Drive
Peoria, IL 61650 USA

Go to www.parsecent.com to learn more about making a warranty claim.

○ one year limited warranty

product failures not covered by this warranty:

This warranty covers defects in manufacture that arise from correct use of the device. It does not cover damage caused by abuse, misuse, improper modification or repair, battery leakage, moisture, extreme heat or cold, corrosive environments, shipping, or high voltage surges from external sources such as power line, telephone line, or connected equipment. This warranty does not cover wear and tear on covers, housing or wiring. Broadcast range depends on the environment. This warranty also does not apply to any product with an altered or defaced serial number.

limits of liability:

We are only responsible for the repair of this product. We will not be liable to you or anyone else for any damages that result from the failure of this product or from the breach of any express or implied warranties. These include damage to other equipment, lost data, lost profits, or any consequential, incidental, or punitive damages. In no event will Nike be liable for any amount greater than the currently suggested retail price of this product. This written warranty represents the entire warranty agreement between Nike and you. This warranty is given in lieu of all other warranties, express or implied, including without limitation implied warranties of merchantability and fitness for a particular purpose. This warranty is limited to the term specified above. No warranties, either express or implied, will apply after this period. This warranty may not be altered in any way other than in writing by an officer of Nike. This warranty gives you specific legal rights and you may also have other rights, which vary, from state to state. Some states do not allow limitations on how long an implied warranty lasts, so the above limitation may not apply to you.

